

FC155E User Manual Book



Closed-Loop Vector



Service First, DO Best



Nita Enterprises

Nita Enterprises

**Add: Shop No.48, Shailbhadra Renegcy, Bldg. No.2, Shailbhadra Nagar,
New Link Road, Nallasopara East - 401209**

Tel: 0250-6493111

Fax: 0250-246-1256

Email: nitaenterpriseslift@gmail.com; info@nitaenterprises.co.in

http: //www.nitaenterprises.co.in



RUN LOCAL/REMOT FWD/REV TUNE/TC

888888

Hz RPM A % V

PRG ENT

 
MF.K

RUN STOP

A control panel with a central rotary knob and several function buttons. The top row has labels 'RUN', 'LOCAL/REMOT', 'FWD/REV', and 'TUNE/TC'. Below these is a digital display showing '888888'. Under the display are labels for units: 'Hz', 'RPM', 'A', '%', and 'V'. The central knob has '+' and '-' signs. The buttons are arranged in a grid: 'PRG' and 'ENT' are on the top row; a right arrow, an up arrow, and 'MF.K' are on the middle row; a green 'RUN' button, a down arrow, and a red 'STOP' button are on the bottom row.



MODEL: FC155E-4T-4.0G/5.5P
POWER: 4.0KW/5.5KW
INPUT: 3PH AC380-440V 50/60HZ
OUTPUT: 3PH AC0-440V 0-300HZ 9A/13A
S/N: 17012403048023



Nita Enterprises